

Electrical connection may only be carried out by qualified personnel

1) switch off luminaire! pull plug!



2) view of driver housing



3) loosen screw connection of driver housing



4) view open driver housing



5) remove SKII cover



6) loosen the wires on the primary side with a suitable tool



This drawing is entrusted to the recipient, subject to all rights.


It may only be used for joint contractual purposes and may not be made accessible to third parties, especially competitors. durlum GmbH Technical changes reserved



Electrical connection may only be carried out by qualified personnel

7) loosen the wires on the secondary side with a suitable tool








9) remove driver unit



10) equip new driver unit with double-sided adhesive tape



11) install new driver unit and connect according to assignment

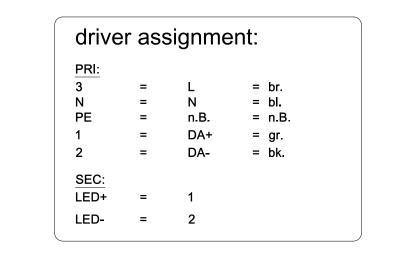

12) replace SKII pretection



This drawing is entrusted to the recipient, subject to all rights.

It may only be used for joint contractual purposes and may not be made accessible to third parties, especially competitors. durlum GmbH Technical changes reserved

Driver change of linear light OMEGA PROTECT 100 for OMEGA 100 / OMEGA 100e

mounting instructions

Electrical connection may only be carried out by qualified personnel

13) view with new driver unit



14) place the cover with pressure and screw it from the center



15) view assembled luminaire



This drawing is entrusted to the recipient, subject to all rights.
It may only be used for joint contractual purposes and may not be made accessible to third parties, especially competitors. durlum GmbH Technical changes reserved